



harmony[®]

INSTRUCTIONS

SLIDETRAX SIDEBOARD TDA (TRANSDUCER DEPLOYMENT ARM)

59504069 © 2009
Harmony is a registered trademark of Confluence Watersports

TO SEE OUR FULL LINE OF
PADDLING ACCESSORIES, VISIT
www.harmonygear.com





SLIDETRAX SIDEBOARD TDA INSTALLATION INSTRUCTIONS


CONTENTS OF KIT	QTY
TDA (pre-assembled)	1
1/4 x 20 x 1-1/2" Pan Head	1
Washer	1
1/4x20 Locknut	1
8 x 3/4 self-taping screw	1

INSTALLATION:

1. First decide the where you want to mount your Sideboard TDA. It can be mounted on either side, bow or the stern. The most popular location is on the right, bow SlideTrax.
2. The SlideTrax Sideboard will need to be removed from the kayak to mount the TDA. Identify the bottom side of a Sideboard. It will be the side that has two recessed bolt holes .
3. Orient the TDA so that the long arm is running down the outer edge of the Sideboard and the hole in the short arm is lined up with the TDA mounting hole on the outer edge of the Sideboard.
4. Run the Pan Head bolt from the bottom, up through this hole in the Sideboard and though the hole in the short arm. Put the washer on the bolt followed by the locknut. Tighten the nut till the end of the bolt is flush with the top of the nut. Arm should be able to rotate (with effort) on the bolt.
5. Screw in the Stop Screw in the smaller Stop Screw hole closest to the TDA.

* You will want the deployed TDA to be at a right angle along side of your kayak. If it is not pointing straight down, you will need to move your Sideboard out by changing which hole the mounting screws are in.

Top view of Sideboard

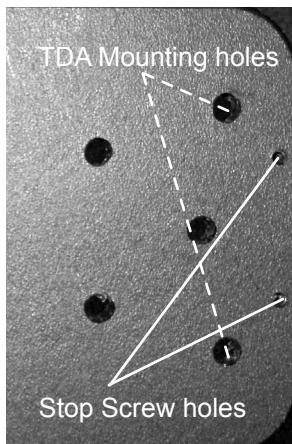

TDA oriented on top of Sideboard as in step 4.



Sideboard shown with fishfinder head and deployed TDA mounted on it.

